


## Hondo Nuevo Ganging Kit for Plinth Bases, Molded Leg and Wood Leg Assembly Instructions

Model Number:  
**C011-023**

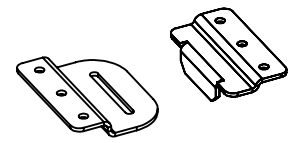

www.norix.com • TEL 800 234-4900

Assembly Notes: Norix is not responsible for any damage due to improper installation. If your shipment does not match the parts list, please contact Norix Customer Service at 800-234-4900. Norix reserves the right to modify design specifications at any time without an obligation to owners of previously sold products.

### PARTS LIST

| ITEM NO. | QTY. | PART NUMBER | DESCRIPTION   |
|----------|------|-------------|---|
| A        | 1    | 011-025     | Hondo Nuevo, Ganging Brkt, Molded Base, Female                      |
| B        | 1    | 011-026     | Hondo Nuevo, Ganging Brkt, Molded Base, Male                        |
| C        | 1    | 060-195     | Hondo Nuevo Ganging Bracket Locating Tool                           |
| D        | 6    | 021-144     | Screw, Sheet Metal, # 10-16 X 1.5", BH, Pin-in-Torx® T-25, Blk. Ox. |
|          | 1    | 071-007     | Pin in Torx® Driver, T-25   |

### Tools Needed

Variable Speed Drill  
Pin in Torx® Driver T-25

**Read and understand instructions completely before assembly.** Determine the front of each unit to be ganged. Some units are symmetrical from front to back.

**1.** Turning the furniture units upside down will simplify assembly. Typically, the bracket with the slot (A) should be attached to the unit that will be on the left.

Place bracket (A) on unit as shown. The front of the bracket should be 9.5" from the front, lower edge of the unit. Use the locating tool (C) to help determine this measurement. Mark the location on the unit, if needed.

Remove any existing screws that would interfere with the location of the bracket.

**2.** The inside edge of the slot should be aligned with the side of the unit as shown.

Attach the bracket to the unit using (3) #10 Screws (D). **Do not overtighten screws.**

Typically, the bracket with the tab (B) should be attached to the unit that will be on the right.

**3.** Place bracket (B) on unit as shown. The front of the bracket should be 9.5" from the front of the unit. Use the locating tool (C) to help determine this measurement. Mark the location on the unit, if needed.

Remove any existing screws that would interfere with the location of the bracket.

**4.** The outer face of the tab should be flush with the side of the unit as shown.

Attach the bracket to the unit using (3) #10 screws (D). **Do not overtighten screws.**

